

PTL



PTL2



PTL6




PTL4



PTL12




PTL2

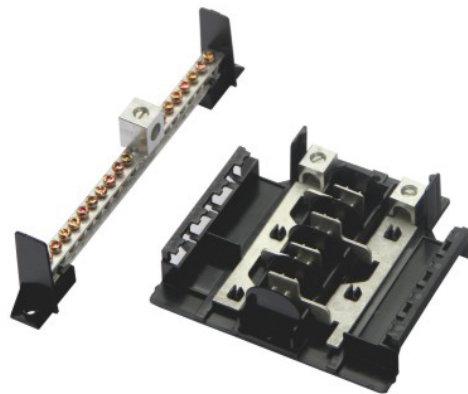

PTL6



PTL4

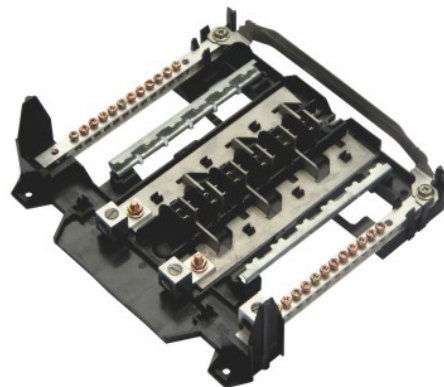

PTL12

Product Number	Description
PTL2	Use on MTL240
PTL4	Use on MTL412
PTL6	Use on MTL612, MTL812
PTL12	Use on MTL1212

Product link : <https://www.amervolt.com/ptl.html>